




### Installation Instructions for Acoustical Panels

- Using **CAE Caulk Adhesive**, cut cartridge nozzle off at a 45° angle to apply a 1/4" bead of adhesive. Apply adhesive from corner to corner on the panel in a X pattern, then a perimeter 1/4" bead, 3/4" from edges.
- Optional, for a fast instant attachment apply a 6" circle of **Web Spray Adhesive** in each of the quadrants as shown in the diagram. Apply pressure to both the bead adhesive and the sprayed areas. The spray on adhesive will keep the panel in place while the bead of **CAE Caulk Adhesive** cures to provide a long lasting permanent bond.
- Make sure the surface to which the panels are being applied is clean and free from dust in order to ensure a good bond.
- Note: 1 can of **Web Spray Adhesive** and 4 tubes of **Caulk Adhesive** are needed for (20) 2' x 4' Panels.

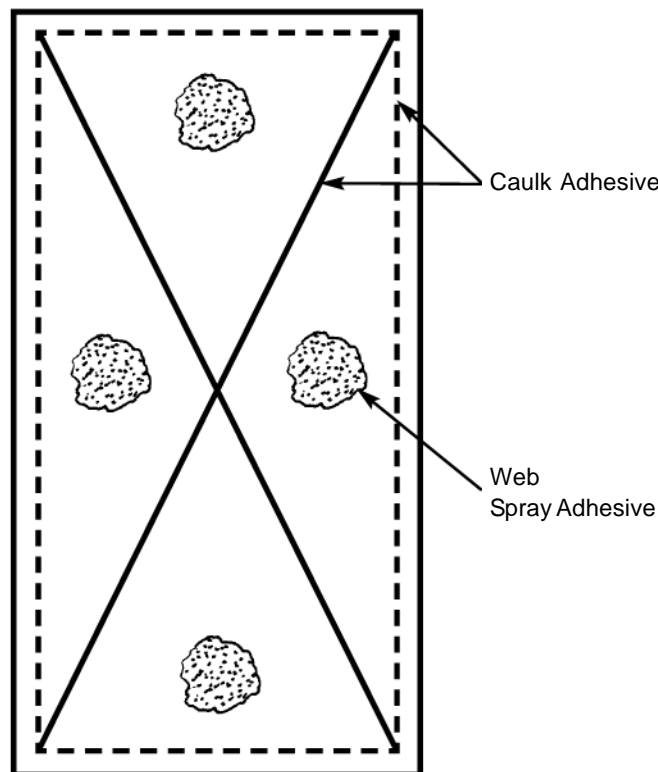

- Acoustic panels can also be installed using velcro or mechanical fasteners like screws and nails

- These instructions apply to the following products:

Acoustic Cotton  
dBA Panels  
Back Box

Fiberglass Panels  
Composite Panels  
Urethane Foams

Acoustic Poly Panels  
Low Frequency Cotton Absorption  
Duct Liner (Behind FabTrax)