


DEFLEX

Installation:

Preparation:

- Prepare Deflex PowerPad for installation by thoroughly washing with warm, soapy water. Allow PowerPad to “air dry” completely before application of any adhesive product.
- Be sure to clean the surface of the body panel or speaker enclosure by removing any dirt or dust particles, wax and grease prior to mounting the Deflex PowerPad. Cleaning agents like Prepsol, Acryli-Clean and IsoPropyl Alcohol works well for this purpose.

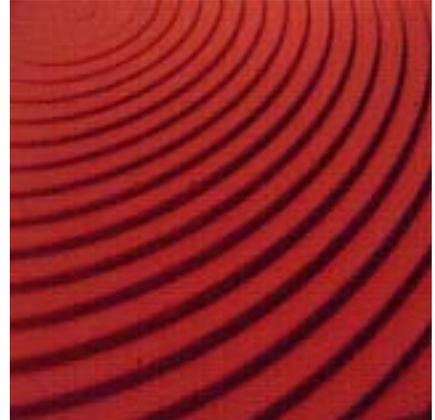

Installation:

- The Deflex PowerPad is most effective when placed on a parallel surface, centered directly behind the loudspeaker. Be sure to align the center of the speaker to the center of the PowerPad, so that destructive speaker backwaves may be fragmented completely.
- Mounting the Deflex Panel can be accomplished by applying the supplied contact adhesive to both the panel and the surface to be treated. Other adhesives have been tested by CAE and offer good results.
 - DAP Weldbond contact adhesive
 - Loctite QuickTite (Gelled Super Glue)



Note: All cyano based super glues are compatible with the Deflex panels.

Caution: User must follow adhesive manufacturer instructions. Test the adhesive in an inconspicuous spot to make sure there is complete compatibility with the surface being treated. Other adhesives may be compatible with Deflex. Always test a small area before attempting any permanent installation.


CASCADE AUDIO ENGINEERING
PH: 541-389-6821 - FX: 541-389-5273
sales@cascadeaudio.com
www.cascadeaudio.com